

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
Micro USB (200-420)	Bluetooth Headset	Jabra	BT2070, BT4010, BT530, BT8040, JX20
		Motorola	H15, H560, H620, H680, H681, H690, H710, H715, H721, H780, H800, Pure H12
		Nokia	8800 Arte
		Plantronics	Discovery 925, Explorer 220, -220, -230, -360, -370, Voyager 815, -835, -855, -885, -pro
	e-Book Reader	Kindle	2, DX
	Handy / PDA	Blackberry	8220 Kickstart, 8220 Pearl Flip, 8520 Curve, 8900 Curve, 8900 Curve Javelin, 8900 Javelin, 9500 Storm
		HTC	Desire Serie, Google Nexus One, HD mini, HD2, Nexus one
		Kyocera	E2000 Tempo, Mako S4000, E1100, TNT S2400
		LG	Chocolate 3 VX8560, 280 Wine, 9700 Dare, AX155, AX300, AX830, AX830 Glimmer, Banter AX265, Banter UX265, BL 40 New Chocolate, BL20 New Chocolate, CF360, CP150, Touch VX11000, enV2, enV2 VX9100, VX9200, GM730, GM750, GT505, GW300, GW520, GW620, GW990, Incite CT810, KF757, LG830, LX600, LX400, LX600, AX585, LX265, M540, AX500, UX840, UX300, UX585, UX830, Vantage 830, VX9600, VX5500, VX8360, GR500
		Motorola	Adventure V750, AURA, Blackflip, E8 OKR, EM30, Evoke QA4, Hint QA30, i576, i776, Karma QA1, Krave ZN4, MB220 DEXT, Milestone, MOTO Q9h, MOTO Qglobal, MOTOZINE, Q-Q9, Q11, Q9h, QUENCH, Rapture VU30, RAZR VE20, RAZR2 V8, RAZR2 V9, Renegade V950, rival A455, RIZR Z6c, ROKR E8, -U9, stature i9, V750, VE20 RAZR, Z6c, Z9, Zine ZN-5
		Nokia	1006, 1606, 2605 Mirage, 2710, 3606, 6205, 6500, 7310, 7900, 8600, 8800, BH-803, N85, N86, N900, N97, X6
		Palm	Pixi, Pre, Treo 800, Treo 800w, Treo Pro
		Samsung	B3210, B3310, B5310, B7300, B7320, B7330, B7610, B7620, C3510, C5510, G810, Galaxy Spica, Highnote SPH-M630, I7500 Galaxy, I8000, i8510, I8520, i8910, M220, M2310, M2510, M2710, M320, M3310, M540, M540, M5650, M6710, M7600, M8910, MyShot II SCH-r460, SGH-i627, SPH-M540, S3110, S3500, S5150, S5560, S5600, S6700, S7070, S7220, S8000, S8300, S8500, SGH-M2310, -M2510, -M2710, -M3310, -M5650, M6710, -M7600, -M8910, -S3110, -S3500, S5150, S5560, S5600, S6700, S7070, S7220, S8000, S8300, S8500, M220, M320, r470, SCH-r470

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
		Sanyo	Katana Eclipse, Eclipse X, Kantana LX, Pro-200, Pro-700, S1, SCP-2700
		Sony	SCP-2700
		Sony / Ericcson	Vivaz-Pro, X10 Serie, X2
mini USB (200-419)	Bluetooth Headset	Jabra	BHS-302, -303, -603, A125s, BT2010, BT2020, BT3030, BT620s
		LG	HBM-500
		Motorola	H270, H15, H3, H350, H371, H375, H390, H500, H550, H555, H605, H670, H700, H9, HS830, HT820, RAZR H3, RAZRWIRE Serie, ROKR S9, S805, S9, SoundPilot S705, T305, T505
		Plantronics	Pulsar 260
	Digitalkamera	Canon	Powershot S60
	Navigationsgerät	Garmin	Edge 205, -305, -605, -705, Forerunner 205, -301, -305, -405, nuvi 1200, -1370T, -1390T, -1490T, -200, -200W, -205, -215, -250, -255, -260, -265, -270, -275, -300, -310, -350, -360, -370, -500, -510, -510, -550, -650, -660, -670, -680, -710, -750, -755, -760, -765, -770, -775, -780, -785, -850, -855, -860, -865, -880, Oregon 220, -300, -400t, -550, Street Pilot c330, -c340, -c530, -c550, -c580, -i2, -i3, -i5, Zumo 400, Zumo 450, -500, -550, -660
		Magellan	Maestro 3140, -3200, -3210, -3225, -3250, -4200, -4210, -4220, -4250, -4350, -4370, RoadMate 1200, -1212, -1400, 1412, -1430
		Mio	c250, c720b, c725, Digi Walker 168, -268, -269, -336, -339, -8390, -8870, -A201, -A701, -c220, -c230, -c310, -c320, c510, -c520, -C710, -C720, -H610, -P350, -P550, -168, -268, -269, -336, -339, -8390, -8870, -A201, -A501, -A701, -A702, Moov 200, -210, -300, -310, -330, -360, -370, -500, -510, -560, -580, P350, 360, 560
		Motorola	Motonav TN20
		Navigon	1200, 1310, 2000s, 2090s, 2100, 2110, 2120, 2150, 2200, 2210, 2310, 5100, 7200, 7210, 7310, 8100, 8110, 8310, NVG 7100
		Navman	F15, F20, F30, F40, F50, N20, N40i, N60i, S30, S50, S70, S90i
		TomTom	Go 520, -530, -540, -630, -720, -730, -920, -930, -940, ONE, ONE XL
		Handy / PDA	Acer

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
		Blackberry	(alle Geräte) 8100 Serie, 8300 Serie, 8700 Serie, 8800 Serie, Bold 9000, Curve, Pearl, (T-Mobile), 5790, 5820, 6210, 6220, 6230, 6280, 6510, 7100, 7105, 7130, 7210, 7230, 7250, 7280, 7290, 7510, 7520, 8100, 8110, 8120, 8130, 8300, 8310, 8320, 8700, 8703, 8705, 8707, 8800, 8820. 8830
		HTC	5800, 8310, Advantage 7501, Amadeus, AMEO, Apache, Artemis P3300, Athena, Audiovox PPC6700, -SMT5600, Breeze, C730 Cavalier, Cavalier S630, Cingular 2125, -8125, -8525, -Cruise 09, -Dash, Dopod 565, -577W, -585, -595, -818, -838, -900, -C800, -D810, Dream, E-Plus PDA IV, Excalibur S620, Faraday, Feeler, FUZE, G1, G2, Grundig GR980, Herald, Hermes 100, -200, -300, Hero, Hurricane, i-mate-JAM, -Jamin, -JAQ, -JASJAM, -JasJar, -K-JAM, -SP JAs, -SP3, -SP4, -SP5, IRIS S640, Juno, Kaiser, Krome Spy, Legend, Libra, Love, Magic G2, Magician, Max 4G, Mogul, MTeoR, NTT CoCoMo, O2-XDA, -Cosmo, -Exec, -IIMini, -neo, -Phone, -Trion, Xphone II, XPhone II, Oxygen, Ozone, P3300, P3350, P3400, P3450, P3452, P3470, P3600, P3650, P3700, P4300, P4350, P4351, P4550, P5500, P5520, P5530, P5550, P6300, P6500, Prophet, Qtek-1010, -1020, -8010, -8020, -8100, -8200, -8300, -9000, -9100, -S100, -S200, -1010, -1020, S200+, S310, S420, S620, S621, S630, S640, S710, S720, S730, S740, SDA, Snap, Snapper, SP5m, T-Mobile MDA, Tattoo, Tilt, Titan, Tornado, Touch Serie, Trinity, Typhoon, TyTN, V1605, V1615, V1640, Vogue, Vox, Wallaby, Wizard, X7500, XV6700
		LG	CB630 Invision, CT810 Incite, VU
		Motorola	A1200, A668, A70, A732, A780, A910, ACTV W450, C305, C362, C363, E1070, E610, E615, E680, E685, E770, EM25, EM325, EM330, Extreme VA76r, i290, i335, i425, i876, i877, ic402, ic502, ic902, KRZR-K1, -K3, L2, L6, M300, Ming A1200, MOTO Q9, MOTO W755, MOTO F3, MotorolaQ, Nextel ic402 Blend, ic502 Buzz, PEBL Serie, Q, RAZR MAXX V6 Ferrari, RAZR maxx Ve, RAZR V3, -V6, rewew 233, RIZR Z3, -Z6tv, ROKR e2, -e6, -Z6, SLVR Serie, V190, V191, V195, V195, V197
Nokia (200-421)	Bluetooth Headset	Nokia	BH-100, 101, 102, 103, 200, 201, 202, 206, 207, 208, 209, 211, 212, 213, 300, 301, 301-LT, 302, 303, 500, 501, 600, 602, 606, 700, 700-BK, 700-WH, 701, 703, 800, 800BK, 800WH, 801, 804, 900, HS-26W, SU-27W Digital Pen

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
	Handy / PDA	Nokia	1200, 1208, 1209, 1220, 1650, 1662, 1680, 2135, 2310, 2330, 2600, 2630, 2680, 2700, 2720, 2730, 2760, 2855i, 2865i, 3109, 3110, 3120, 3152, 3155, 3250, 3300, 3500, 3555, 3600, 3610, 3710, 3720, 5000, 5030, 5070, 5100, 5130, 5200, 5220, 5230, 5235, 5300, 5310, 5320, 5330, 5500, 5530, 5610, 5630, 5700, 5730, 5800, 6070, 6080, 6085, 6086, 6101, 6102, 6103, 6103b, 6110, 6111, 6115i, 6120, 6121, 6124, 6125, 6126, 6131, 6131, 6133, 6136, 6151, 6152, 6155, 6165, 6210, 6212, 6216, 6220, 6233, 6234, 6260, 6263, 6265, 6267, 6288, 6270, 6275, 6280, 6282, 6288, 6290, 6300, 6301, 6303, 6500, 6555, 6600, 6650, 6700, 6710, 6720, 6730, 6760, 7020, 7070, 7100, 7210, 7230, 7310, 7360, 7370, 7372, 7373, 7390, 7500, 7510, 7610, 770, 8800, E50, E51, E52, E55, E61, E61i, E62, E63, E65, E66, E71, E72, E75, E90, N70, N71, N72, N73, N75, N76, N77, N78, N79, N80, N800, N80ie, N81, N810, N82, N90, N91, N92, N93, N95, N96, Surge 6790, VI-3155, X3
Apple (200-416)	Handy / PDA	Apple	Iphone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4GS,
	MP3 Player	Apple	iPod, iPod Classic, iPod mini, iPod nano, iPod Photo, iPod Shuffle (2te Generation), iPod Touch, iPod U2, iPod Video
LG (200-429)	Bluetooth Headset	LG	HBM-310, -520, -530, -730, -750, -755, -770, HBS-200, -250
	Handy / PDA	LG	285, 380, 385, AX260 Scoop, AX-275, -380, -565, -8600, CE110, CG180, Cherry Chocolate, KG800, VX8500, VX8550, Chocolate-Green, -Pink, -Red, Cookie KP500, CU515, CU575, CU915, CU920, EnV, Flare, GB130, GB250, GS200, GU230, HB620T, Invision CB630, KB770, KC780, KC910, KE500, KE590, KE800, KE820, KE850 Prada, KE970, KF510, KF600, KF700, KF750, KG270, KG320, KG800, KG808, KG810, KG90, KM330, KM380, KM500, KM710, KM900, KP100, KP235, KP500, KP501, KP502, KS360, KS500, KS660, KT520, KU380, KU580, KU800, KU970, KU990, L600V, LX150, LX160, LX165, LX260, LX265, LX570, MG800C, Mint Chocolate, Muziq, Muziq-Pink, Neon GT365, KE850, KC910, Rumor, Trax, UX260, UX380, Venus, Viewty, Voyager, Wave, White Chocolate

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
Sony Ericsson (200-425)	Bluetooth Headset	Sony / Ericsson	HBH-DS200, -DS205, -DS220, -DS970, -DS980, -GV735, -IS800, IV835, -IV840, -PV700, PV702, PV703, PV705, PV708, PV710, PV712, PV715, PV720, PV740, PV770, HCB-100E, -105, -108, -120, -150, MBR-100
	Handy / PDA	Sony / Ericsson	Aino, BeJoo, Jalou, C510, C702, C901, C902, C903, C905, Cybershot C903a, D750, D750i, Elm, F305, G502, G700, G705, G900, Hazel, J100, J100i, J110i, J120i, J220, J221, J230, K200, K220, K310, K320, K330, K510, K530, K550, K610, K618, K630, K660, K750, K758, K770, K790, K800, K810, K818, K850, M600, M608, P1i, P990, Pureness Xperia, R300 Radio, R306 Radio, S302, S312, S500, S600, Satio, T250, T270, T280, T303, T650, T700, T707, T715, TM506, V630, V640, W200, W2001, W205, W300, W302, W350, W380, W395, W508, W518, W530, W550, W580, W595, W600, W610, W618, W660, W700, W705, W710, W712, W715, W760, W800, W810, W830, W850, W880, W888, W890, W900, W902, W910, W950, W958, W960, W680, W995, Yari, Z250i, Z310, Z320, Z520, Z525, Z530, Z550, Z558, Z610, Z710, Z712, Z750, Z770, Z850
Samsung 1 D800 (200-423)	Handy / PDA	Samsung	A117, A303, A436, A437, A503, A706, A707, A717, A727, SCH-U740, SGH-D900, SGH-i607, C140, C170, C260, C520, D520, D800, D806, D807, D808, D820, D828, D830, D840, D900, E200, E250, E390, E420, E490, E500, E570, E590, E740, E747, E780, E790, E830, E840, E870, E900, E950, F300, F500, F600, SPH-A503, A303, i520, i600, i607, i620, i710, J600, M300, M305, M610, M620, P300, P310, P910, P920, P930, P940, R410, R510, S501, S720i, S730i, SCH-U420, -U510, -U710, -U740, -A117, -A226, -A436, -A437, T219, T329, T409, T739, T509, T519, T629, T809, X820, X830, Z150, Z170, Z230, Z240, Z360, Z400, Z510, Z540, Z560, Z710, Z720, ZV40, ZV60

Adapter (Artikelnummer)	Gerät	Marke	Typenbezeichnung
Samsung 2 G600 (200-424)	Handy / PDA	Samsung	A127, A137, A226, A227, A237, A513, A516, A517, A523, A637, A736, A737, A746, A727, A766, A767, A777, A827, A836, A837, A877, Access SGH-A827, B100, B130, B2700, B510, T539, T919, I617, T729, C170, C180, C250, C450, C5130, C6620, C6625, D780, D880, D880 Duo, D980, E210, E251, E910, F110, F200, F210, F250, F266, F330, F400, F406, F480, F490, F700, G400, G600, G800, Giorgio Armani, U700, U940, Helio Fin, I200, I325, I400, I450, I550, I560, I610, I616, I617, I640, I780, I900, I907, I910, J200, J210, J400, J700, J706, J750, J770, L170, L400, L600, L760, L810, M110, M210, M300, M310, M3200, M510, M520, M530, M600, M800, M8800, P180, P220, P250, P260, P270, P520, P720, R200, R210, R310, R410, R430, R500, R600, R610, R800, S3100, S3650, S7330, T109, T229, T336, T339, T429, T439. T456, T459, T539, T639, T729, T739, T819, U430, U470, U700, U706, U800, U900, U940
Sony PSP (200-427)	Digitalkamera	Casio	EX-M1, -M2, -M20, -P505, -P600, -P700, -S1, -S100, S2, S20, S3, S500, S600, S770, S880, V7, V8, Z1000, Z1200, Z3, Z30, Z4, Z40, Z50, Z500, Z55, Z57, Z60, Z600, Z70, Z700, Z750, Z850
		HP	PhotoSmart R927
		Kodak	DC4800, 6490, 7440, 7590, 7630, EasyShare M1033, M1063, M1073, M1093, M763, M863, M873, M883, M893, P712, V1003, V1073, V1233, V1253, V550, V610, V803, One, LS420, LS443, LS633, LS743, LS753, LS755, M1033, M1063, M1073, M1093, M753, M763, M853, M863, M873, M883, M893, P712, P850, P880,
	Videospiel	Sony	Playstation Portable, Portable Slim
	Navigationsgerät	Sony	Nav-U NV-U52, U70, U71T U72T, U73T, U74T, U82, U83T, U92T, U94T
		TomTom	Go 300, 500, 510, 700, 710, 900, 910, Mobile 5, Navigator 5, 6, Rider,
	MP3 Player	Creative	MuVo2, Nomad Jukebox 2, 3, Jukebox Zen, Zen Xtra
iRiver		H320, H340	